

Ensure battens have been installed around the roof perimeter and along the face of gutter edge.



Lay out membrane and allow to relax for 30 mins. Then roll the rubber to centre point starting from one edge.




Apply adhesive to deck and roll the Membrane back out whilst the adhesive is still wet.



Brush out any pockets of air and then repeat this process on the other half.




Apply supplied mastic to perimeter of roof before folding rubber over the edges.

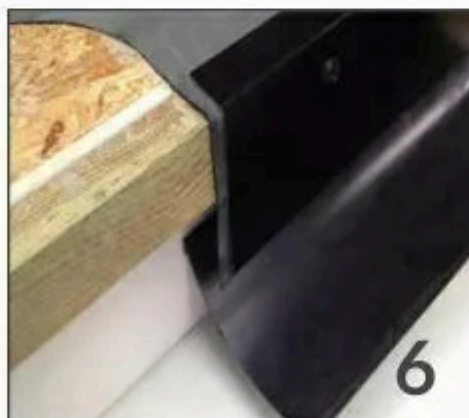

Cut to size metal trim and Face fix along the Gutter edge (Use supplied joiners if required).



Cut to size metal trim and top fix along the kerb edges (Use supplied joiners if required).

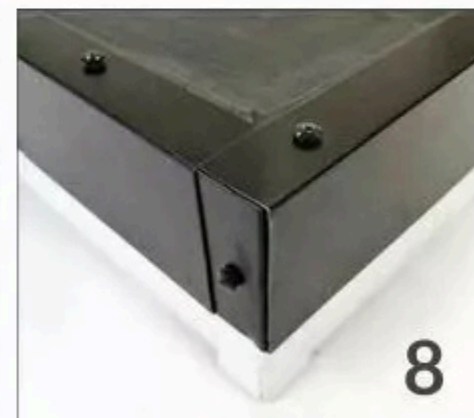

Apply metal corner pieces and complete installation by cutting off any access membrane.